



INSTRUCTIONS



Minimum 80%
Recycled Plastic!


Please Recycle
This Sheet!



IMPORTANT! HOLD CAN and HANDLE LEVEL.
With fingers **OFF TRIGGER**, rotate can until spray tip opening points
AWAY from you. Then, **for best results:**
Please Read, Understand & Follow All Instructions Before Proceeding.


TO ATTACH

Hold can & handle **LEVEL** as shown.
Firmly grasp barrel between thumb
& 4 fingers, then in one continuous
motion, **Firmly Push & Rotate**
handle while sliding bottom of
nosepiece under can's top ring.

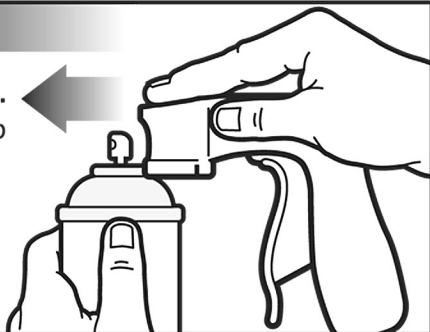

TO REMOVE

Hold can & handle **LEVEL** as shown.
While holding can in place, **Firmly**
Rotate & Pull handle away
from can.

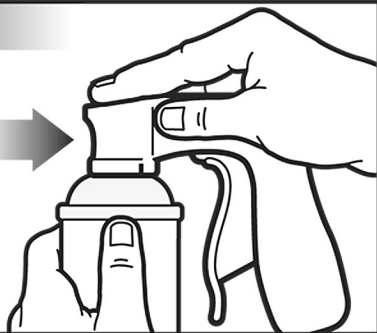

*For Best Results, Always
Remove CAN-GUN1 During
Periods of Non-Use.*

Share Your Experience at: www.cangun1.com/blog



CAUTION! Do Not Shake Can Holding Any
Part of CAN-GUN1. CAN-GUN1 is Exclusively
Designed To Provide Effortless Spraying.

Limited Warranty

CAN-GUN1 is Warranted For Life Against
Defects In Materials & Workmanship **ONLY**
when attached &/or removed as instructed.



© 2010 SafeWorld™ International Inc.
P.O. Box 1030, Ashland, Oregon 97520 USA

Thank you for purchasing CAN-GUN®1
COMMENTS, QUESTIONS & NEW PRODUCT SUGGESTIONS:

Call Toll-Free 1-800-743-0115

Web: www.cangun1.com

e-mail: info@safeworld.com

Always Use Protective Eyewear.
Keep Out Of Reach Of Children.

U.S. DESIGN PATENT NO. D592,953
OTHER PATENTS PENDING.

CAN-GUN®1 is a Registered Trademark of SafeWorld Int'l, Inc.